

1 Before driving

1-1. Hybrid system

Hybrid system.....	28
Hybrid system precautions	31
Energy monitor/ consumption screen	36
Hybrid vehicle driving tips.....	41

1-2. Key information

Keys	43
------------	----

1-3. Opening, closing and locking the doors

Smart access system with push-button start	48
Wireless remote control.....	59
Side doors	62
Back door	65

1-4. Adjustable components (seats, mirrors, steering wheel)

Front seats.....	76
Rear seats.....	81
Driving position memory	85
Head restraints.....	88
Seat belts	90
Steering wheel.....	98
Anti-glare inside rear view mirror	100
Outside rear view mirrors.....	102

1-5. Opening and closing the windows and moon roof

Power windows.....	105
Moon roof	108

1-6. Refueling

Opening the fuel tank cap.....	112
--------------------------------	-----

1-7. Theft deterrent system

Immobilizer system	117
Alarm.....	119
Theft prevention labels (for U.S.A.).....	122

1-8. Safety information

Correct driving posture	123
SRS airbags	125
Front passenger occupant classification system.....	137
Child restraint systems	142
Installing child restraints.....	146

2 When driving

2-1. Driving procedures

Driving the vehicle	158
Power (ignition) switch	168
Hybrid transmission	173
Turn signal lever	181
Parking brake	182
Horn.....	183

2-2. Instrument cluster

Gauges and meters	184
Indicators and warning lights.....	188
Multi-information display	192
Head-up display	198

2-3. Operating the lights and windshield wipers

Headlight switch.....	203
Automatic High Beam	208
Fog light switch	214
Windshield wipers and washer.....	216
Rear window wiper and washer.....	221
Headlight cleaner switch	222

2-4. Using other driving systems

Cruise control	223
Dynamic radar cruise control.....	227
Intuitive parking assist	239
Electronically modulated air suspension	246
Rear view monitor system (rear view mirror-attached type).....	252
Driving assist systems.....	256
Hill-start assist control	262
Pre-Collision System.....	264

2-5. Driving information

Utility vehicle precautions	269
Cargo and luggage	273
Vehicle load limits.....	278
Winter driving tips	279
Trailer towing (AWD models with towing package).....	283
Trailer towing (2WD models and AWD models without towing package).....	296
Dinghy towing	297

3 Interior features

3-1. Using the air conditioning system and defogger

Automatic air conditioning system	300
Rear window defogger switch.....	308
Windshield wiper de-icer	309

3-2. Using the audio system

Audio system	310
Using the radio.....	314
Using the CD player.....	324
Playing MP3 and WMA discs	334
Operating an iPod.....	344
Operating a USB memory.....	352
Optimal use of the audio system	361
Using the AUX port.....	364
Using the steering wheel audio switches	366

3-3. Using the Bluetooth® audio system

Bluetooth® audio system	369
Using the Bluetooth® audio system	372
Operating a Bluetooth® enabled portable player	377
Setting up a Bluetooth® enabled portable player	381
Bluetooth® audio system setup	388

3-4. Using the hands-free phone system (for mobile phones)

Hands-free system for mobile phones.....	389
Using the hands-free system (for mobile phones).....	393
Making a phone call.....	401
Setting a mobile phone.....	406
Security and system setup	412
Using the phone book.....	416

3-5. Using the interior lights

Interior lights list.....	423
• Interior lights	424
• Personal lights	424

3-6. Using the storage features

List of storage features.....	426
• Glove box	427
• Bottle holders/ door pockets	428
• Cup holders.....	429
• Console box.....	431
• Auxiliary boxes.....	433
• Under tray.....	434

3-7. Other interior features

Sun visors.....	435
Vanity mirrors.....	436
Clock.....	437
Outside temperature display	438
Multi-display light control.....	439
Power outlets.....	440
Seat heaters and ventilators	443
Armrest	445
Coat hooks	446
Floor mat.....	447
Luggage compartment features.....	448
Garage door opener.....	452
Compass.....	458
Safety Connect	462

4 Maintenance and care

4-1. Maintenance and care

Cleaning and protecting the vehicle exterior	470
Cleaning and protecting the vehicle interior.....	473

4-2. Maintenance

Maintenance requirements	476
General maintenance.....	478
Emission inspection and maintenance (I/M) programs	482

4-3. Do-it-yourself maintenance

Do-it-yourself service precautions.....	483
Hood	486
Positioning a floor jack.....	487
Engine compartment.....	489
12-volt battery.....	501
Tires	508
Tire inflation pressure.....	517
Wheels	521
Air conditioning filter.....	523
Electronic key battery	526
Checking and replacing fuses.....	528
Headlight aim	544
Light bulbs.....	547

5 When trouble arises

5-1. Essential information

Emergency flashers.....	566
If your vehicle needs to be towed.....	567
If you think something is wrong	573
Event data recorder	574

5-2. Steps to take in an emergency

If a warning light turns on or a warning buzzer sounds... ..	576
If a warning message is displayed.....	585
If you have a flat tire.....	606
If the hybrid system will not start	620
If the shift lever cannot be shifted from P	622
If you lose your keys	623
If the electronic key does not operate properly	624
If the vehicle 12-volt battery is discharged	627
If your vehicle overheats	630
If the vehicle becomes stuck.....	635
If your vehicle has to be stopped in an emergency	636

6 Vehicle specifications

6-1. Specifications

Maintenance data (fuel, oil level, etc.).....	638
Fuel information.....	650
Tire information.....	653

6-2. Customization

Customizable features.....	666
----------------------------	-----

6-3. Initialization

Items to initialize	675
---------------------------	-----

7 For owners

Reporting safety defects for U.S. owners.....	678
Seat belt instructions for Canadian owners (in French).....	679
SRS airbag instructions for Canadian owners (in French).....	682

Index

Abbreviation list 694

Alphabetical index..... 696

What to do if... 706

1

2

3

4

5

6

7